



Global Part Numbering Oscillators

GLOBAL PART NUMBERING OPTIONS												
X	O	5	7	C	T	E	C	N	A	4	0	M
MODEL NUMBER	FREQUENCY STABILITY			OPERATING TEMPERATURE (OTR)		ENABLE/DISABLE		PACKAGE CODE		OPTION		FREQUENCY
XO63 = XOSM-533 XO62 = XOSM-532 XO61 = XOSM-531 XO57 = XOSM-57 XO37 = XOSM-573 XO27 = XOSM-572 XO17 = XOSM-571	C = 0.01 % (100 ppm) D = 0.005 % (50 ppm) E = 0.0025 % (25 ppm)			T = 0 °C to + 70 °C R = - 40 °C to + 85 °C		F = Pin 1 open E = Disable to tristate		Tape and reel H = RF7 Bulk A = B04 (XO63, XO62, XO61) C = D06 (XO57, XO37, XO27, XO17)		NA = No additional options 60 = 45/55 symmetry Contact factory for all other options		4M = 4 MHz 40M = 40 MHz 100M = 100 MHz 12M288 = 12 288 MHz M is used as decimal place holder in frequency
Example: XO57CTECNA40M												