




Device: SOT-223 (1)

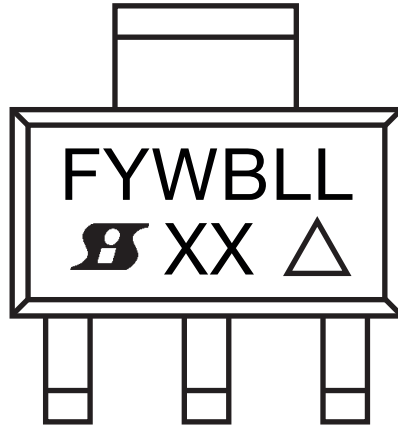

- F = Factory ⁽¹⁾
- Y = Year code ⁽¹⁾
- W = Week code ⁽¹⁾
- B = Wafer fab ⁽¹⁾
- LL = Lot code ⁽¹⁾

- XX = Partnumber code ⁽²⁾

Notes

- ⁽¹⁾ Contact factory for decoding of factory, year, week, wafer fab, and lot codes
- ⁽²⁾ See datasheet for code

The current marking strategy is reflected. Contact your local sales representative for historical marking strategies for these packages.