





## TO-220AC, TO-220AC FULL-PAK

### TO-220AC

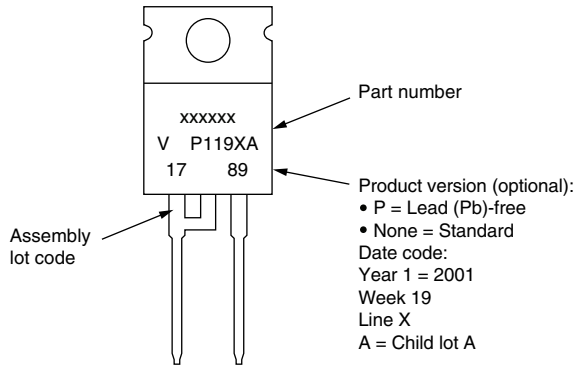

Example: This is a xxxxxx with assembly lot code 1789, child lot A, assembled on WW 19, 2001 in the assembly line "X"

### TO-220AC FULL-PAK

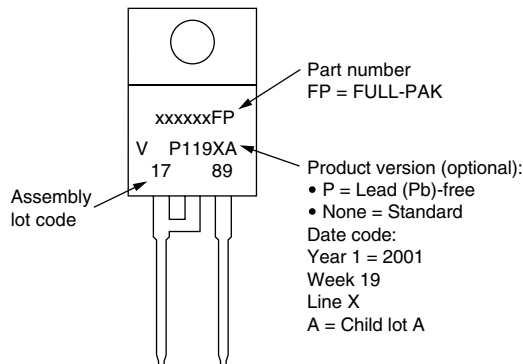

Example: This is a xxxxxxFP with assembly lot code 1789, child lot A, assembled on WW 19, 2001 in the assembly line "X"