





TO-220AB, TO-220AC

TO-220AB

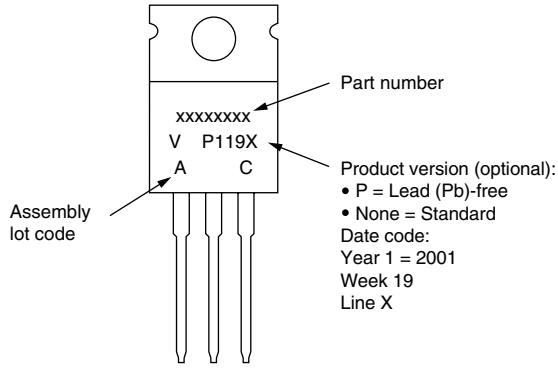

Example: This is a xxxxxxxx with assembly lot code AC, assembled on WW 19, 2001 in the assembly line "X"

TO-220AC

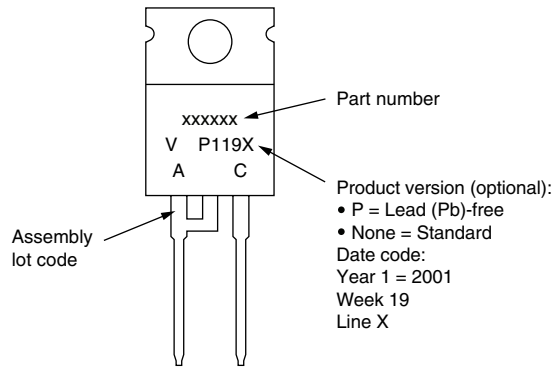

Example: This is a xxxxxx with assembly lot code AC, assembled on WW 19, 2001 in the assembly line "X"