





TO-220, TO-262

TO-220

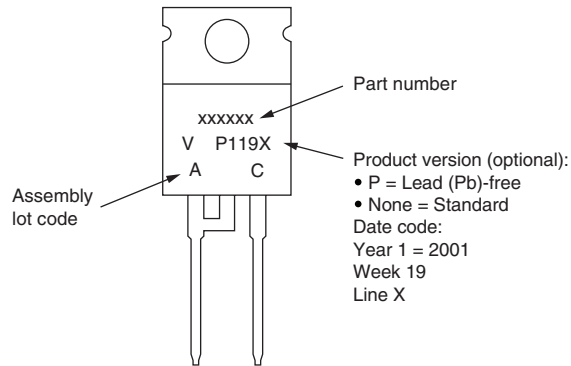

Example: This is a xxxxxx with assembly lot code AC, assembled on WW 19, 2001 in the assembly line "X"

TO-262

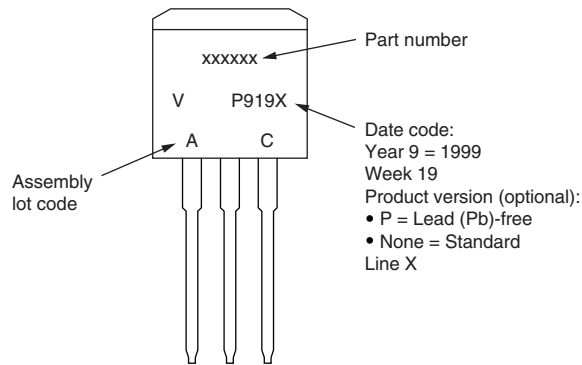

Example: This is a xxxxxx with assembly lot code AC, assembled on WW 19, 1999