


TO-220AB FULL-PAK

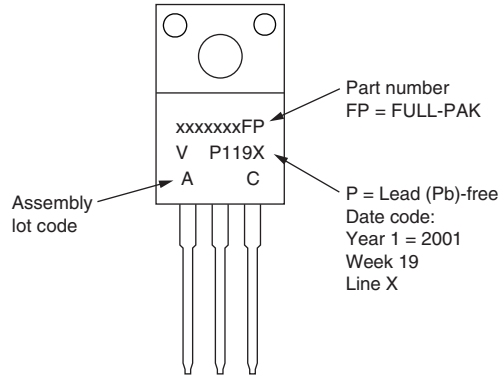

Example: This is a xxxxxxxFP with assembly lot code AC, assembled on WW 19, 2001 in the assembly line "X"