

Rotational Absolute Magnetic Kit Encoder Version 60 mm HP Position Sensor Version 2.1



LINKS TO ADDITIONAL RESOURCES





QUICK REFERENCE DATA			
Sensor type	ROTATIONAL, magnetic technology		
Output type	Connector Würth Elektronik 687106182122 to plug a flat flex cable or connector Hirose DF58-6P-1.2V(21) to plug an external connector equipped of wires		
Market appliance	Industrial		
Dimensions	Diameter 60 mm		

FEATURES

- · Especially dedicated to robotics applications
- High precision, high repeatability, high resolution, single or multi-turns variant



RoHS

- · Plug and play or self-calibration
- Memorization of last position before power off
- Not sensitive to external magnetic fields and temperature
- Not sensitive to moisture and pollution
- Especially dedicated for harsh conditions (vibrations, shocks, CEM...)
- Built-in self-monitoring
- · Hall effect principle
- Option back-up battery connector
- Material categorization: for definitions of compliance please see www.vishav.com/doc?99912

ELECTRICAL SPECIFICATIONS			
PARAMETER	RAMK060M11318	RAMK060M11319	
Voltage power supply (on sensor connector)	5 V ±	0.25 V	
Supply current at 5 V	≤ 18	0 mA	
Standard output format	S	SI	
Optional output format	Biss-C or SPI		
Useful electrical angle	36	60°	
Accuracy at 25 °C	Better than 13 bits (0.044°)		
Repeatability	> 16	6 bits	
Resolution	262 144 points (18 bits, ≈ 0.0014°)	335 872 points (≈ 18.35 bits, ≈ 0.0011°)	
Startup time	≤ 21	0 ms	
Data latency time	≤ 20)0 μs	
Maximum sampling rate	9.2	kHz	
Optional multi-turn counter without external battery	16 bits counter		
For multi-turns options	Memorization of the last angle value and the multi-turns counter at the power off		
On request: multi-turns counter with external backup battery (not supplied)	16 bits counter, battery: voltage 3.6 V to 5 V, I _{max.} 15 mA		

MECHANICAL SPECIFICATIONS (All Versions)		
PARAMETER		
Mechanical angle	360°	
Maximum rotation speed (1)	10 000 rpm (mechanical limits)	
Rotor weight	< 40 g	
Stator weight	< 15 g	

Note

⁽¹⁾ For application with rotation speed > 150 rpm, please consider the RAIK060 model.

www.vishay.com

Vishay MCB

SAP PART	SAP PART NUMBERING GUIDELINES																
TYPE	MODEL	DESIGN	SIZE (mm)	TYPE	FUNCTION	ACCURACY (BITS)	RESOLUTION (BITS)	OUTPUT	PACKAGING	OPTION							
								F = SPI CCW J = SSI CCW L = Biss-C	B = box								
R = rotational	AM	K = kit	060	М	M 1	M 1 13	13		F = SPI CCW	B = box	661 = multi-turn counting						
												J = SSI CCW	B = box	663 = multi-turn counting			
																	L = Biss-C
ON REQUEST	Γ: VARIAN	IT RAMKO	60 18 E	BITS (26	2 144 POINT	S) ⁽¹⁾											
								F = SPI CCW J = SSI CCW L = Biss-C	B = box								
R = rotational	AM	K = kit	060	М	1	M 1	M 1	M 1	M 1	1	1 13	18	F = SPI CCW	B = box	684 = multi-turn counting		
													J = SSI CCW	B = box	685 = multi-turn counting		
								L = Biss-C	B = box	683 = multi-turn counting							

Notes

- "Multi-turn with connection back-up battery" possible on request, please contact Vishay
- (1) The standard RAMK060 gives 18.35 bits (335 872 points) and can be used when the exact number of points could be loaded in customer's device. To provide only 18.0 bits (262 144 points), when only the number of bits can be loaded in customer's device, the last variant RAMK060M11318XB is a solution available on request

ACCESSORY	
Transfer adaptor (see section "Accessory on Request")	ACCSRAMKADAPTCB067
External connector equipped of wires to obtain a wires output (see section "Accessory on Request")	ACCSRAMKWIRESOB069

PERFORMANCE		
PARAMETER		
Standard operating temperature range	-40 °C to +85 °C	
Storage temperature range	-55 °C to +105 °C	
Humidity	≤ 80 % no condensing	
Environmental protection	Coating on PCB components side	
Vibrations	0.05 g ² /Hz, 20 Hz to 2000 Hz for 1 hour along three major axis	
Shocks	100 g, 14 ms, 1/2 sine (one on each axis)	
Magnetic protection	 No influence up to 3 mT (typical value) (uniform magnetic field) No permanent deviation greater than 0.03° if a magnet of 50 mT was in contact with the upper metallic shape of the rotor No permanent deviation greater than 0.03° if a magnet of 50 mT was exposed at 5 mm of the magnetic rubber 	



COMMUNICATION INTERFACES

Three protocols are possible: SSI protocol, Biss-C protocol, or SPI protocol.

Connector Types

Connector to plug a flat flex cable: output connector FCC pitch 0.5 mm, thickness 0.3 mm bottom contacts connector Würth Elektronik 687106182122

Connector to plug an external connector equipped of wires: output connector wires connector on the PCB: Hirose DF58-6P-1.2V(21)

- User crimp socket: Hirose DF58-6S-1.2C
- User crimp contact: Hirose DF58-2830SCF

Recommended FCC (customer side)

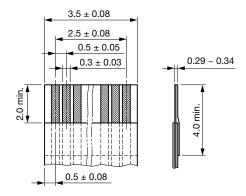


Fig. 1 - Recommended FCC

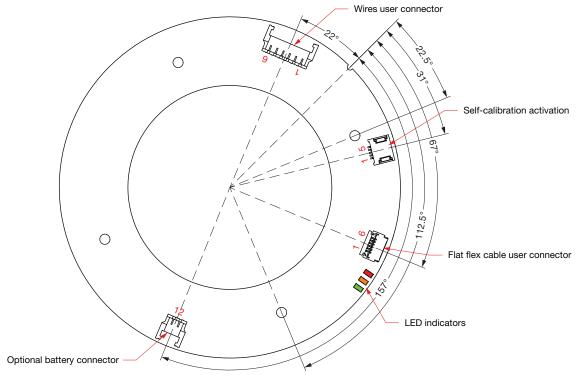


Fig. 2 - User Connectors

Note

See also last page for accessory which allows to provide a different pinning



SELF-MONITORING

All frame includes 3 status bits. These 3 status bits form a 3 bits word.

	BIT A1				BIT A3	DECIMAL	LED			PRIORITY
	MSB	BIT A2	LSB	VALUE	STATUS	STATUS INFORMATION	ACTION	LEVEL		
Normal operation	0	0	0	0	Green	Frame without error or warning.	No action required.	-		
Temperature overflow	0	1	1	3	Red	This error is set if the temperature of the sensor is superior to +85 °C or inferior to -40 °C. This information is sent until temperature is over range.	Set the environmental temperature between -40 °C to +85 °C .	1 (highest)		
Mechanical mounting error	0	0	1	1	Red	This error is set when the mechanical tolerances of the airgap parameter are out of range. This information is sent until power supply turns off.	The mechanical mounting must be adjusted.	2		
Cells default	0	1	0	2	Red	This error occurs when a magnetic cell is temporary or completely out of order. This error is sent at each concerned frame.	Check the sensor integrity.	3		
Need self-calibration	1	0	0	4	Orange	To get the best performances, a self-calibration is required. This information is available until power supply turns off.	The self-calibration shall be start.	4		
Self-calibration error	1	0	1	5	Orange	This warning occurs when the self-calibration is not ended correctly. The factory settings are restored. This information is available until power supply turns off.	The self-calibration shall be restarted.	5		
Multi-turn counter error	1	1	0	6	Green	This warning occurs when at the power on the sensor has detected an excessive displacement during the power off. This warning and the multi-turns counter are reset at the next power on.	No action required.	6		
Internal angle correction	1	1	1	7	Orange stealthily	This warning occurs when the sensor has performed an internal correction error. This warning is sent at each concerned frame.	It is advisable to adjust the mechanical assembly or to perform a self-calibration.	7 (lowest)		



SSI INTERFACE (Standard Output Format)

TABLE 1 - SSI CONNECTOR		
PIN NO.	NAME	
1	V _{CC} power supply	
2	CLK+	
3	CLK-	
4	DATA+	
5	DATA-	
6	GND power supply	

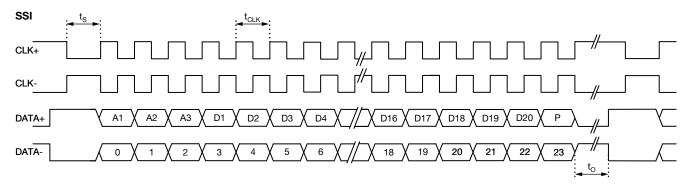


Fig. 3 - SSI Chronogram

TABLE 2 - SSI PARAMETERS					
PARAMETER	RAMK060M11318	RAMK060M11319			
SSI configuration	Slave	mode only			
CLK and DATA differential interface	RS422 according	ng to the EIA-RS422			
DATA output	Binary two	o's complement			
DATA bit status		3			
DATA bits (angle value)	18	19			
Parity		EVEN			
Time start (t _s)	1 μs	minimum			
Clock frequency (1/t _{CLK})	100 kF	100 kHz to 3 MHz			
Time out (t _O)	20 µs	20 μs minimum			

TABLE 3 - SSI DATA BITS FORMAT				
ANGLE VALUE SSI DATA BITS FORMAT				
FRAME BITS (SSI CHRONOGRAM FIG. 3)	RAMK060M11318	RAMK060M11319		
Bit 0	Statu	is bit A1		
Bit 1	Status bit A2			
Bit 2	Statu	ıs bit A3		
Bit 3	D1: D/	ATA MSB		
Bit 20	D18: DATA LSB	D18: DATA		
Bit 21	D19: always = 0	D19: DATA LSB		
Bit 22	D20: a	lways = 0		
Bit 23	Parity			



BISS-C INTERFACE (Optional)

TABLE 4 - BISS-C CONNECTOR		
PIN NO.	NAME	
1	V _{CC} power supply	
2	CLK+	
3	CLK-	
4	DATA+	
5	DATA-	
6	GND power supply	

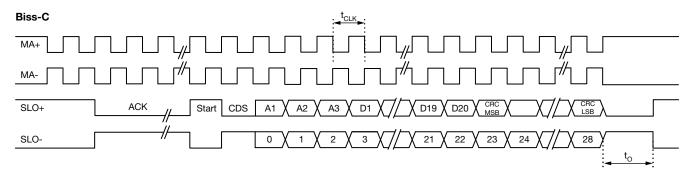


Fig. 4 - Biss-C Chronogram

TABLE 5 - BISS-C PARAMETERS				
PARAMETER	RAMK060M11318	RAMK060M11319		
Biss-C configuration	Point to point (mul	Point to point (multi-slave not supported)		
CLK and DATA differential interface	RS422 according	RS422 according to the EIA-RS422		
DATA output	Binary two	Binary two's complement		
ACK	12 bits alv	12 bits always equal to 0		
Start	1 bit alwa	1 bit always equal to 1		
CDS	1 bit alwa	1 bit always equal to 0		
DATA bit status		3		
DATA bits (angle value)	18	19		
CRC	6 bits inverted, P(x	6 bits inverted, P(x) = X3 + X1 + 1, (0 x 43)		
Clock frequency (1/t _{CLK})	5 MHz maxim	5 MHz maximum (3 MHz tested)		
Time out (t _O)	20 µs	20 μs minimum		

TABLE 6 - BISS-C DATA BITS FORMAT			
ANGLE VALUE BISS-C DATA BITS FORMAT			
FRAME BITS (BISS-C CHRONOGRAM FIG. 4)	RAMK060M11318	RAMK060M11319	
Bit 0	Statu	s bit A1	
Bit 1	Statu	s bit A2	
Bit 2	Status bit A3		
Bit 3	D1: DA	ATA MSB	
Bit 20	D18: DATA LSB	D18: DATA	
Bit 21	D19: always = 0	D19: DATA LSB	
Bit 22	D20: always = 0		
Bit 23	CRC MSB		
Bit 28	8 CRC LSB		



SPI INTERFACE (Optional)

A2

Bit 1

Α1

Bit 0

АЗ

Bit 2

D1

Bit 3

TABLE 7 - SPI CONNECTOR		
PIN NO.	NAME	
1	V _{CC} power supply	
2	CLK	
3	DATA	
4	CS	
5	NC	
6	GND power supply	

Fig. 5 - SPI Chronogram

D19

Bit 21

D20

Bit 22

Ρ

Bit 23

Α1

A2

АЗ

D1

D18

Bit 20

TABLE 8 - SPI PARAMETERS				
PARAMETER	R RAMK060M11318 RAMK060M11319			
SPI configuration	Slave	mode only		
CS and CLK level	TTL3	3.3 V or 5 V		
DATA level	Т	TTL 5 V		
DATA output	Binary two	Binary two's complement		
DATA bit status		3		
DATA bits (angle value)	18	19		
Parity		EVEN		
Time start (t _s)	1 µs	1 µs minimum		
Clock frequency (1/t _{CLK})	Up	Up to 4 MHz		
Time out (t _o)	6 µs	6 μs minimum		

TABLE 9 - SPI DATA BITS FORMAT				
ANGLE VALUE SPI DATA BITS FORMAT				
FRAME BITS (SPI CHRONOGRAM FIG. 5)	RAMK060M11318	RAMK060M11319		
Bit 0	Statu	ıs bit A1		
Bit 1	Status bit A2			
Bit 2	Status bit A3			
Bit 3	D1: D/	D1: DATA MSB		
Bit 20	D18: DATA LSB	D18: DATA		
Bit 21	D19: always = 0	D19: DATA LSB		
Bit 22	D20: a	llways = 0		
Bit 23	Р	Parity		



OPTIONAL MULTI-TURNS COUNTER

First Possible Option: Counting of Turns Without Battery Backup Connector and Memorization of Last Position Before Power Off!

In normal operation when the power is on, the counting of the turns is made in the two directions, clockwise and anticlockwise. The maximum value of the counter is -32 768 anticlockwise turns to +32 767 clockwise turns. When the counter reaches the maximum value of 32 767, the next counter value is set to -32 768. When it reaches the minimum value of -32 768, the next value is set to 32 767.

The value of the turn counter is sent in the output frame in two complement. No counting during power off. When the power is off, the last position before power cutting (value of the multi-turn counter and value of the angle) is memorized in a no volatile memory and the encoder can accept (during power off) a movement of encoder up to \pm 90° to calculate and release the new position as soon as the power comes back.

The number of non-volatile memory in write-in cycles is unlimited.

At the power on, if the variation of the angle is superior to \pm 90°, the error flag of the frame is set and the multi-turn counter is reset at the next power on. This procedure could be used to reset the multi-turns counter.

The multi-turns counter is also reset when the sensor enter in the self-calibration mode.

Second Possible Option: Counting of Turns With Battery Backup Across Connector

After the power off, if the sensor turns, the number of revolutions are counted internally. The counting is made in the two directions, clockwise and anticlockwise. The maximum value of the counter is -32 767 anticlockwise turns to +32 767 clockwise turns. When the counter reaches the maximum value of 32 767, the next counter value is set to -32 768. When the counter reaches the minimum of -32 768, the next value is set to 32 767.

During the power is off, no data is sent to the output. With the backup battery connector plugged to external battery, with low consumption, the encoder counts the number of turns and stocks this data in memory. As soon as the power comes back, the encoder releases the data of number of turns and continues to count in normal conditions.

The multi-turns counter is also reset when the sensor enter in the self-calibration mode.

MULTI-TURNS SSI OUTPUT FORMAT

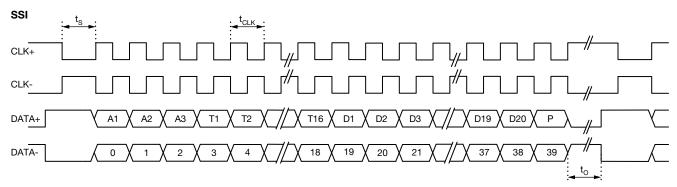


Fig. 6 - SSI Multi-Turns Chronogram

TABLE 10 - SSI MULTI-TURN DATA BITS FORMAT			
SSI DATA BITS FORMAT			
FRAME BITS (SSI CHRONOGRAM FIG. 6)	RAMK060M11318	RAMK060M11319	
Bit 0	Stat	us bit A1	
Bit 1	Stat	us bit A2	
Bit 2	Bit 2 Status bit A3		
Bit 3	Bit 3 T1: multi-turn counter MSB		
Bit 18	Bit 18 T16: multi-turn counter LSB		
Bit 19	Bit 19 D1: DATA MSB		
Bit 36	D18: DATA LSB	D18: DATA	
Bit 37 D19: always = 0 D19: DATA LSB			
Bit 38	Bit 38 D20: always = 0		
it 39 Parity		Parity	



MULTI-TURNS BISS-C OUTPUT FORMAT

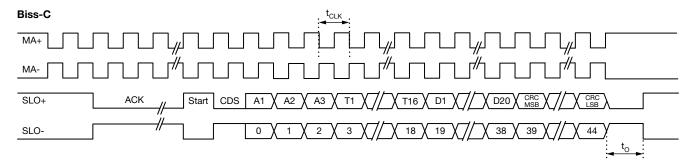


Fig. 7 - Biss-C Multi-Turns Chronogram

TABLE 11 - BISS-C MULTI-TURN DATA BITS FORMAT			
ANGLE VALUE BISS-C DATA BITS FORMAT			
FRAME BITS (BISS CHRONOGRAM FIG. 7)	RAMK060M11318	RAMK060M11319	
Bit 0	Sta	tus bit A1	
Bit 1	Sta	tus bit A2	
Bit 2	Bit 2 Status bit A3		
Bit 3	Bit 3 T1: multi-turn counter MSB		
Bit 18	T16: multi-turn counter LSB		
Bit 19	D1: DATA MSB		
Bit 36	D18: DATA LSB	D18: DATA	
Bit 37	D19: always = 0 D19: DATA LSB		
Bit 38	D20: always = 0		
Bit 39	CRC MSB		
Bit 44	CRC LSB		

MULTI-TURNS SPI OUTPUT FORMAT

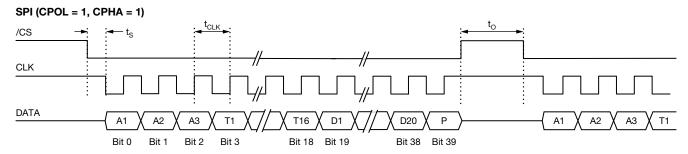


Fig. 8 - SPI Multi-Turns Chronogram

TABLE 12 - SPI MULTI-TURN DATA BITS FORMAT			
SPI DATA BITS FORMAT			
FRAME BITS (SSI CHRONOGRAM FIG. 8)	RAMK060M11318	RAMK060M11319	
Bit 0	Stat	us bit A1	
Bit 1	Stat	us bit A2	
Bit 2	Bit 2 Status bit A3		
Bit 3	Bit 3 T1: multi-turn counter MSB		
Bit 18	Bit 18 T16: multi-turn counter LSB		
Bit 19	D1: 0	DATA MSB	
Bit 36 D18: DATA LSB D18: DATA			
Bit 37 D19: always = 0 D19: DATA LSB			
Bit 38 D20: always = 0			
Bit 39 Parity			




OPTIONAL BATTERY BACKUP CONNECTOR


- Header on the PCB: Hirose SMD 7 106 (666-1001-0-21)
- Crimp socket: Hirose DF58-2S-1.2C (Hirose number 666-1006-0 00)
- Crimp contact: Hirose DF58-2830SCF (Hirose number 666-1011-0 00)


MOUNTING INFORMATION (All Versions)


SENSOR DIMENSIONS

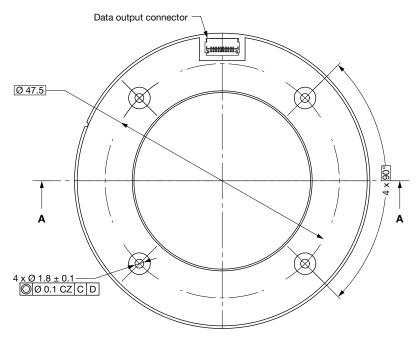

Stator

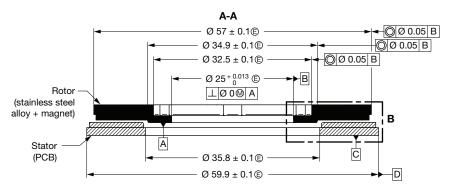

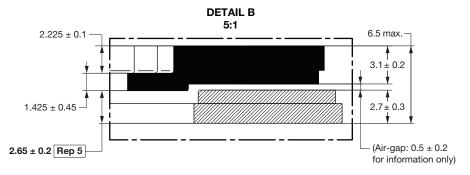

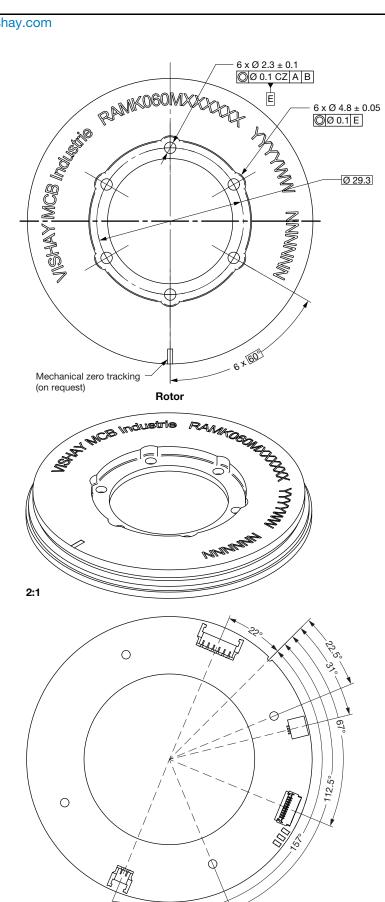



MOUNTING DATA AND SELF-MONITORING

After the mounting and throughout the use of the sensor, the encoder provides across the LED colors and also across data bits of self-monitoring the status of correct mounting and of correct operation. Look at section "Self-Monitoring" and the table "Summary" in section "Approach No. 2", "Self-Calibration Procedure" of §1.


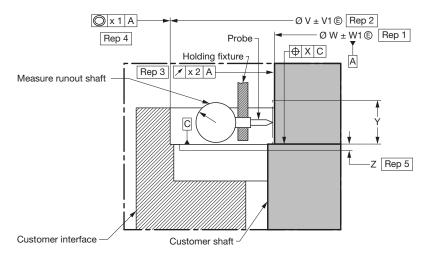


Fig. 9 - Mounting Detail



Rotor axis and stator axis are the same but the reference surfaces are not parallel

Fig. 10 - Beat

APPROACH NO. 1: TOTALLY PLUG AND PLAY WITHOUT SELF-CALIBRATION

<u>Comment:</u> it is the case for the customer's equipment whose mechanical tolerances are under control (requirements described in Table 13).

TABL	TABLE 13 - RECOMMENDED DIMENSIONS AND TOLERANCES OF CUSTOMER INTERFACES			
Rep 1	Customer shaft diameter for centering of the rotor (see Fig. 9)	25 mm + 0 mm / - 0.010 mm		
Rep 2	Customer interface diameter for centering of the stator (see Fig. 9)	60 mm + 0.060 mm / 0 mm		
Rep 3	Diameter runout of the customer shaft for the rotor centering (see Fig. 9)	< 0.005 mm		
Rep 4	Concentricity of the stator centering diameter versus shaft centering diameter (see Fig. 9)	< 0.020 mm		
Rep 5	Position of the stator reference bottom surface versus rotor reference bottom surface (see Fig. 9)	2.65 mm ± 0.1 mm		
Rep 6	Total beat included in the air-gap between Ref. C (rotor) and Ref. D (stator) (see Fig. 10)	< 0.2 mm		



APPROACH NO. 2: SELF-CALIBRATION

<u>Comment:</u> it is the case for the customer's equipment whose mechanical tolerances are NOT under the tolerances described in Approach No. 1, a self-calibration can be used to compensate the misalignment (= eccentricity between rotor axis and stator axis) and the runout of the customer shaft for the rotor centering (eccentricity mounting of the rotor).

Other case where the self-calibration has to be used, it is when the sensor sets the auto-calibration flag (conditions to use the self-calibration procedure: Table 14).

Self-Calibration Procedure

- 1. How to know if the encoder needs a self-calibration
 - a. Mount the encoder
 - b. Plug the connector
 - c. Turn-on the power supply
 - d. Turn the rotor (at least 360°)
 - e. Look at the LED color

Case 1 Green LED: ON

Red LED: OFF

Orange LED: OFF The encoder is ready to be used with full performances

Case 2 Green LED: OFF

Red LED: ON

Orange LED: OFF Bad mechanical position, adjust the mechanical position

Case 3 Green LED: OFF

Red LED: OFF

Orange LED: ON Do the self-calibration

SUMMARY			
LED COLOR	STATUS	ACTION	
Green	Ready to use with full performances	None	
Orange	The resolution and / or the accuracy might be out of specification	Do the self-calibration	
Red	Bad mechanical position	Adjust the mechanical position	
No light	No power	Check the power supply	

Reminder: similar data are available across the output frame "status bits of self-monitoring":

- "Normal operation" = green color
- "Need self-calibration" = orange color
- "Mechanical mounting error" = red color
- 2. How to do the self-calibration
 - a. The encoder is mounted, the connector is unplug
 - b. Plug the shunt supplied by Vishay and turn-on the power supply (the red LED is blinking)
 - c. Turn the rotor with a maximum rotation speed of 10 rpm (at least 360°) (acquisition of data = the orange LED is blinking)
 - d. When the green and orange LEDs are blinking, the correction calculation is in progress
 - e. When the green LED is blinking, the correction calculation is finished
 - f. Turn off the power supply and unplug the shunt
 - g. Plug the connector, turn-on the power supply, turn the rotor (at 360°) and look at the LED color. Green LED: ON | Red LED: OFF | Orange LED: OFF
 - h. The encoder is ready to be used with full performances

Note

The procedure of self-calibration is also described in video available to ask for Vishay



The self-calibration is operational when the requirements are in accordance with Table 14.

	TABLE 14 - RECOMMENDED DIMENSIONS AND TOLERANCES OF CUSTOMER INTERFACES TO USE THE SELF-CALIBRATION PROCEDURE		
Rep 3	Diameter runout of the customer shaft for the rotor centering (included gap between customer shaft and inner rotor diameter) (see Fig. 9)	< 0.08 mm	
Rep 4	4 Misalignment: concentricity of the stator centering diameter versus shaft centering diameter (included tolerances of customer holder and stator interface) (see Fig. 9) ± 0.8 mm		
Rep 5	Rep 5 Position of the stator reference bottom surface versus rotor reference bottom surface (see Fig. 9) 2.65 mm ± 0.2 mm (air-gap: the condition of previous line avoids to measure the air-gap) (air-gap = 0.5 mm ± 0.2 mm		
Rep 6	Total beat included in the air-gap between Ref. C (rotor) and Ref. D (stator) (see Fig. 10)	< 0.2 mm	

Note

- Values at room temperature
- Recommended screws for the rotor: M2 ISO 4762 (stainless steel A4) with recommended torque = 0.3 Nm ± 10 % + narrow
 washer M2 NFE 25514 "Z" type (stainless steel A4) thickness 0.5 mm. It is recommended to add glue on screws threads
 function of environmental and use conditions
- Recommended screws for the stator: M1.6 ISO 1207 (stainless steel A4, screw head diameter ≤ 3.2 mm and screw head height ≤ 1 mm) with recommended torque = 0.10 Nm ± 10 % + washer M1.6 DIN 125 (insulated raw material) thickness 0.3 mm. It is recommended to add glue on screws function of environmental and use conditions

OTHER INFORMATION



ATTENTION!
Observe Precautions for Handling Electrostatic
Sensitive Devices!




Do not use magnetic parts around the encoder!

WARNING: the rotor and the stator must have the same serial number!

- Do not damage the magnetic disk surface
- Do not put the disk in contact with metallic particles
- Do not use cleaning product or chemical product

ACCESSORIES ON REQUEST

TRANSFER ADAPTOR TO PROVIDE A FLAT FLEX CABLE WITH DIFFERENT PINNING AT THE OUTPUT

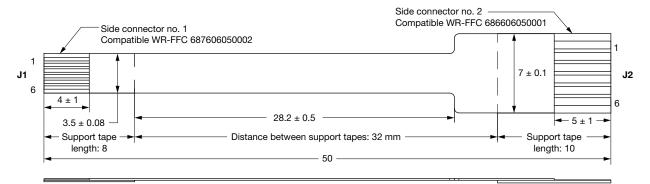


CONNECTOR J1		CONNECTOR J2			
EN	ENCODER RAMK SIDE		CUSTOMER DEVICE SIDE		
PIN NO.	SPI	SSI/Biss-C	PIN NO.	SPI	SSI/Biss-C
1	VCC	VCC	1	VCC	VCC
2	CLK	CLK+	2	Not connected	Data-
3	MISO	CLK-	3	MISO	CLK-
4	CS	Data+	4	CLK	CLK+
5	Not connected	Data-	5	CS	Data+
6	GND	GND	6	GND	GND

CONNECTOR J1		CONNECTOR J2
Pin 1	connected to	Pin 1
Pin 2	connected to	Pin 4
Pin 3	connected to	Pin 3
Pin 4	connected to	Pin 5
Pin 5	connected to	Pin 2
Pin 6	connected to	Pin 6


Revision: 13-Mar-2025 14 Document Number: 32579



EXTERNAL CONNECTOR EQUIPPED OF WIRES TO OBTAIN A WIRES OUTPUT

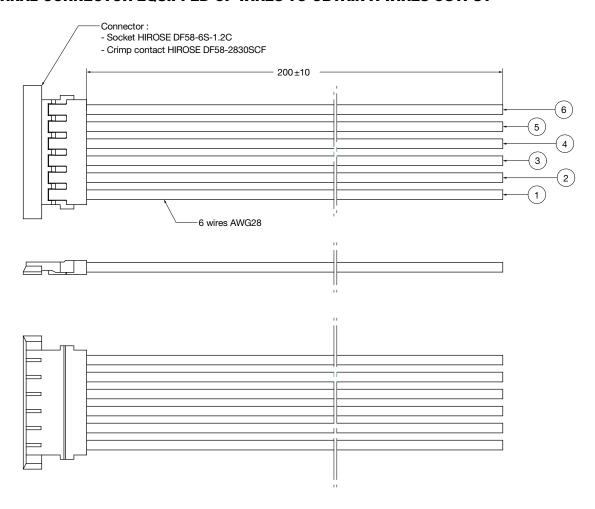

COMMUNICATION INTERFACES				
PIN NO.	FUNCTIONS			WIRE COLORS
	SSI	SPI	BISS-C	
1	VCC power supply	VCC power supply	VCC power supply	Red
2	CLK+	CLK	CLK+	Green
3	CLK-	Data	CLK-	Grey
4	Data+	CS	Data+	Yellow
5	Data-	Not connected	Data-	Orange
6	GND power supply	GND power supply	GND power supply	Black

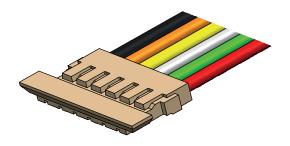

Note

• General tolerancing according to ISO 8015



Legal Disclaimer Notice

Vishay

Disclaimer

ALL PRODUCT, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE.

Vishay Intertechnology, Inc., its affiliates, agents, and employees, and all persons acting on its or their behalf (collectively, "Vishay"), disclaim any and all liability for any errors, inaccuracies or incompleteness contained in any datasheet or in any other disclosure relating to any product.

Vishay makes no warranty, representation or guarantee regarding the suitability of the products for any particular purpose or the continuing production of any product. To the maximum extent permitted by applicable law, Vishay disclaims (i) any and all liability arising out of the application or use of any product, (ii) any and all liability, including without limitation special, consequential or incidental damages, and (iii) any and all implied warranties, including warranties of fitness for particular purpose, non-infringement and merchantability.

Statements regarding the suitability of products for certain types of applications are based on Vishay's knowledge of typical requirements that are often placed on Vishay products in generic applications. Such statements are not binding statements about the suitability of products for a particular application. It is the customer's responsibility to validate that a particular product with the properties described in the product specification is suitable for use in a particular application. Parameters provided in datasheets and / or specifications may vary in different applications and performance may vary over time. All operating parameters, including typical parameters, must be validated for each customer application by the customer's technical experts. Product specifications do not expand or otherwise modify Vishay's terms and conditions of purchase, including but not limited to the warranty expressed therein.

Hyperlinks included in this datasheet may direct users to third-party websites. These links are provided as a convenience and for informational purposes only. Inclusion of these hyperlinks does not constitute an endorsement or an approval by Vishay of any of the products, services or opinions of the corporation, organization or individual associated with the third-party website. Vishay disclaims any and all liability and bears no responsibility for the accuracy, legality or content of the third-party website or for that of subsequent links.

Vishay products are not designed for use in life-saving or life-sustaining applications or any application in which the failure of the Vishay product could result in personal injury or death unless specifically qualified in writing by Vishay. Customers using or selling Vishay products not expressly indicated for use in such applications do so at their own risk. Please contact authorized Vishay personnel to obtain written terms and conditions regarding products designed for such applications.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted by this document or by any conduct of Vishay. Product names and markings noted herein may be trademarks of their respective owners.