Designing With Sfernice Thin Film Fuses

By Alexandre Moulin

INTRODUCTION

SMD thin film fuses play an essential role in protecting modern electronic circuits against overcurrent conditions. Compact and precise, they are used in applications that demand quick response to fault events and minimal power dissipation under normal operating conditions. This article reviews the key principles behind thin film fuse operation and outlines the factors you should consider when selecting a device for your design – including current and voltage ratings, breaking capacity, temperature derating, and pulse withstand capability.

Understanding these parameters helps ensure robust circuit protection in applications ranging from battery management systems to LED lighting, infotainment modules, and industrial control electronics.

FEATURES AND APPLICATIONS

Thin film chip fuses offer rapid and reliable interruption of excessive current, typically opening within seconds under overload conditions. Available in a range of standard surface-mount sizes (0402 to 1206) and current ratings from a few hundred milliamperes to several amperes, they provide high breaking capacities suitable for low voltage DC circuits. Their construction enables consistent performance, predictable fusing behavior, and stable characteristics over time.

These devices are commonly used for secondary, non-resettable protection where space is limited and fast action is required. Typical applications include portable and industrial equipment, Li-ion battery packs, LED drivers, and display or infotainment systems – anywhere a small, precise, and dependable overcurrent protection element is needed.

UNDERSTANDING FUSE OPERATION

To understand how these fuses work, we'll start with the basic principle: the heat energy (Q) generated in a conductor is given by the equation $Q = I^2 \times R \times t$, where I is the current, R is the resistance, and t is the time. This is known as the Joule effect. A fuse makes use of this principle as a safety component that interrupts current when it exceeds a predefined level. Inside the fuse, a thin film alloy melts when the heat becomes too high. Because the heat is proportional to the square of the current, higher currents generate much more heat. Once this heat exceeds the melting point of the fuse element, the fuse opens the circuit and protects your design.

$Q = I^2 \times R \times t$

Q = heat generated (J)

I = peak current (A)

R = electrical resistance (Ω)

t = time (s)

WHITE PAPER

For technical questions, contact: sferthinfilm@vishay.com
THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE. THE PRODUCTS DESCRIBED HEREIN AND THIS DOCUMENT ARE SUBJECT TO SPECIFIC DISCLAIMERS, SET FORTH AT www.vishay.com/doc?91000

Designing With Sfernice Thin Film Fuses

SELECTING AN SMD CHIP FUSE

When you select an SMD chip fuse, you need to take several factors into account. These include the normal operating current in your circuit, the maximum operating voltage (AC or DC), the fuse's breaking capacity, the ambient operating temperature, the overload current and fusing time required for the fuse to open, and the interrupting ratings ($I^2 \times t$) and pulse withstand capability for inrush currents.

Sfernice Very Fast **FF** Fuse	⇒ S3F	= < 5 s at 200 %
Sfernice **F**ast **F**use	⇒ S2F	= < 60 s at 200 %
Sfernice **T**ime Lag Fuse	⇒ SFT	= < 5 s at 250 %
Sfernice Long **T**ime Lag Fuse **TT**	⇒ SF2T	= < 120 s at 200 %

The SFT and SF2T series are designed to withstand temporary inrush currents and non-damaging overloads while providing reliable protection against sustained fault conditions.

NORMAL OPERATING CURRENT AND RATED CURRENT

Fuses are temperature-sensitive devices; their ratings have been established in a 25 °C ambient. At an ambient temperature of 25 °C, you should plan to use a fuse at no more than 70 % of its rated current under those conditions. For example, the S2F060332V1A00T is rated at 1 A at 25 °C, but you should not exceed 0.7 A at that temperature (Fig. 1). This safety coefficient is necessary to compensate for common variations in operating conditions.

S2F0603 RATING

PART DESIGNATION	MARKING	RATED CURRENT (A)	FUSING TIME	RESISTANCE (1) (mΩ), TOLERANCE: ± 25 %	RATED VOLTAGE (V_{DC})	BREAKING CAPACITY
S2F060350VA400TT	E	0.40	Open within 1 min at 200 % rated current	496	50	50 V_{DC}, 50 A
S2F060350VA500TT	F	0.50		290		
S2F060332VA630TT	I	0.63		205	32	32 V_{DC}, 50 A
S2F060332VA800TT	K	0.80		132		
S2F060332V1A00TT	L	1.00		84		
S2F060332V1A25TT	M	1.25		63		
S2F060332V1A50TT	P	1.50		50.5		
S2F060332V1A60TT	N	1.60		45		
S2F060332V2A00TT	S	2.00		34		
S2F060332V2A50TT	T	2.50		24.5		
S2F060332V3A00TT	3	3.00		20		
S2F060332V3A15TT	U	3.15		19		
S2F060332V4A00TT	W	4.00		13		
S2F060332V5A00TT	Y	5.00		11		

Fig. 1 - Rated Current Values for S2F0603 Thin Film Fuses, Showing Corresponding Resistance, Voltage Rating, and Breaking Capacity

For technical questions, contact: sferthinfilm@vishay.com
THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE. THE PRODUCTS DESCRIBED HEREIN AND THIS DOCUMENT ARE SUBJECT TO SPECIFIC DISCLAIMERS, SET FORTH AT www.vishay.com/doc?91000

Designing With Sfernice Thin Film Fuses

RATED VOLTAGE AND APPLICATION VOLTAGE

The rated voltage of a fuse indicates the maximum voltage at which it can safely interrupt a short circuit current. To protect your circuit, the fuse's rated voltage must be equal to or greater than the available circuit voltage. For instance, a fuse with a rated voltage of 32 V_{DC} can be used in any circuit where the maximum operating voltage does not exceed 32 V_{DC}.

BREAKING CAPACITY

Breaking capacity defines the maximum current that the fuse can safely interrupt at its rated voltage. In a fault or short-circuit condition, your fuse may experience an overload current many times higher than its normal operating current. A correctly specified fuse ensures safe operation by remaining intact and clearing the circuit under these conditions.

TEMPERATURE DERATING

Since SMD fuses are sensitive to temperature, their ratings are based on 25 °C conditions. As the current flows, the active area of the fuse heats up due to the Joule effect, so you need to apply compensation at higher ambient temperatures. This is where the derating curve becomes essential. For example, if your circuit draws a normal operating current of 1.4 A at 25 °C with an S2F0603 fuse, you should select a 2.0 A device (1.4 A/0.70). At 60 °C, where the derating factor is 95 %, the same 1.4 A operating current would require a 2.1 A fuse (1.4 A/(0.70 x 0.95)), making the S2F060332V2A50TT the recommended choice (Fig. 2).

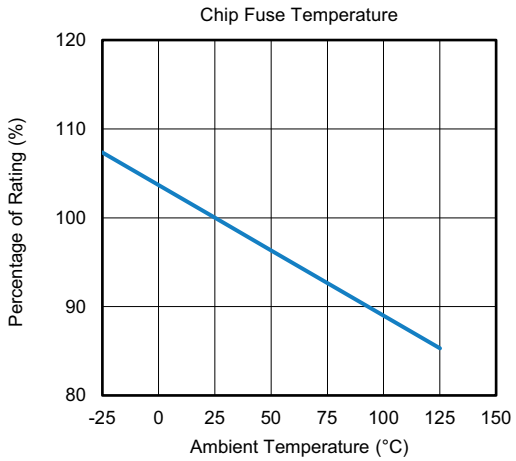

Fig. 2 - Temperature Derating Curve for S2F0603 Thin Film Fuses, Showing how Current Ratings Decrease as Ambient Temperature Increases. To Ensure Safe Operation, you Should Apply the Derating Factor When Selecting a Fuse, as Ratings are Based on 25 °C Test Conditions

For technical questions, contact: sferthinfilm@vishay.com
THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE. THE PRODUCTS DESCRIBED HEREIN AND THIS DOCUMENT ARE SUBJECT TO SPECIFIC DISCLAIMERS, SET FORTH AT www.vishay.com/doc?91000

Designing With Sfernice Thin Film Fuses

OVERLOAD CURRENT AND FUSING TIME

The time it takes a fuse to blow depends on both current and temperature: the higher the current, the shorter the time. Fusing curves are established under standard test conditions at 25 °C. For example, the S3F040232V1A00T has a rated current of 1 A and a fusing characteristic of 200 % IR in a maximum of 5 s, but under test conditions it fuses in just 0.17 s at 200 % I_R (Fig. 3 and Fig. 4).

S3F0402 RATING			
PART DESIGNATION	MARKING	RATED CURRENT (A)	FUSING TIME
S3F040232VA500TT	F	0.50	Open within 5 s at 200 % rated current
S3F040232VA800TT	K	0.80	
S3F040232V1A00TT	L	1.00	
S3F040232V1A25TT	M	1.25	
S3F040232V1A50TT	P	1.50	
S3F040232V1A60TT	N	1.60	
S3F040232V2A00TT	S	2.00	
S3F040232V2A50TT	T	2.50	
S3F040232V3A00TT	3	3.00	
S3F040232V3A15TT	U	3.15	
S3F040232V4A00TT	W	4.00	

Fig. 3 - Rated Current Values for S3F0402 Thin Film Fuses, With Fusing Times Specified as Opening Within 5 s at 200 % of Rated Current

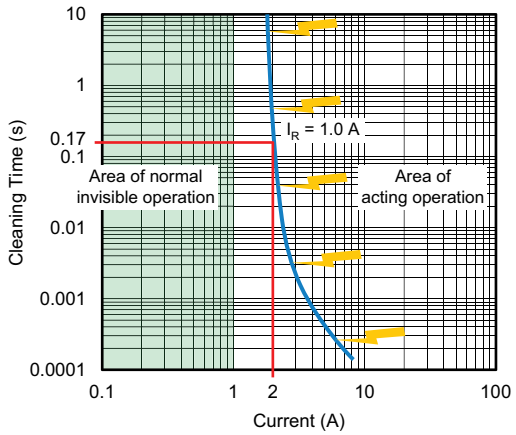

Fig. 4 - Fusing Characteristic Curve for S3F0402 Thin Film Fuses, Showing how Fusing Time Decreases as Current Increases. The Devices Open Within 5 s at 200 % of Rated Current Under Standard Test Conditions at 25 °C

WHITE PAPER

For technical questions, contact: sferthinfilm@vishay.com
THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE. THE PRODUCTS DESCRIBED HEREIN AND THIS DOCUMENT ARE SUBJECT TO SPECIFIC DISCLAIMERS, SET FORTH AT www.vishay.com/doc?91000

Designing With Sfernice Thin Film Fuses

INTERRUPTING RATINGS ($I^2 \times t$) AND PULSES (INRUSH CURRENT)

Another key parameter you need to consider is the $I^2 \times t$ value, which represents the energy required to melt the fuse element. This value is often used to size fuses for impulse or inrush current conditions. When evaluating pulses, you must also consider the number of occurrences and the operating temperature, since repeated electrical pulses cause thermal cycling and mechanical fatigue that can shorten fuse life. For this reason, it's important to know the pulse cycle withstand capability, which specifies how many pulses of a given $I^2 \times t$ the fuse can handle without opening, assuming there is sufficient cool-down time between pulses.

As an example, let's look at a customer requirement with a normal operating current of 1.4 A, an operating voltage of 24 V, and an ambient temperature of 60 °C. In this case, the S2F060332V2A50TT fuse is suitable. The pulse withstand requirement is 30.6 A for 100 000 cycles (Table 1 and Fig. 5).

Breaking this down further:

- W1 = 30.6 A for 8 µs
- W2 = 15 A for 8 µs
- W3 = 3 A for 7 µs

The total $I^2 \times t$ is calculated as 0.00457966 A^2s. The S2F060332V2A50TT fuse has an $I^2 \times t$ rating of 0.055 A^2s, which is greater than the requirement. Even after applying a factor for 100 000 pulse cycles (0.01925 A^2s), the fuse still meets the condition, as this remains higher than the calculated 0.00457966 A^2s.

Therefore, for this set of requirements – normal operating current of 1.4 A, operating voltage of 24 V, ambient temperature of 60 °C, and inrush current pulses up to 30.6 A for 100 000 cycles – you can confidently select the S2F060332V2A50TT fuse.

TABLE 1 - COMMON CURRENT WAVEFORMS

NUMBER	TYPE	WAVEFORM	CALCULATED JOULE INTEGRAL
1	Sinusoidal waveform (1 cycle)	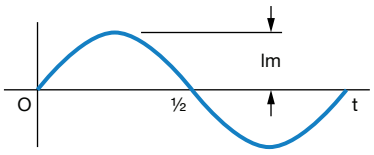	$\frac{1}{2} I_m^2 \times t$
2	Sinusoidal waveform ($^1/_2$ cycle)	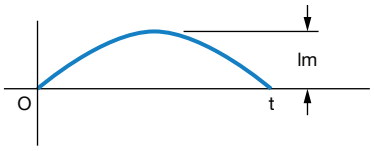	$\frac{1}{2} I_m^2 \times t$
3	Triangle waveform	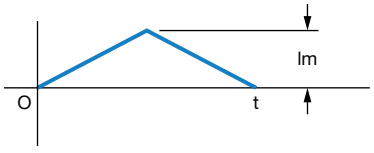	$\frac{1}{3} I_m^2 \times t$
4	Rectangular waveform	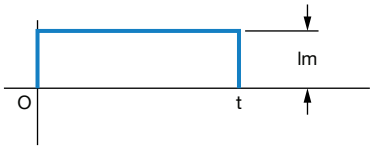	$I_m^2 \times t$

Note

- Common current waveforms and their corresponding Joule integral calculations, showing the energy contribution for sinusoidal (full and half cycle), triangular, and rectangular pulses

For technical questions, contact: sferthinfilm@vishay.com
THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE. THE PRODUCTS DESCRIBED HEREIN AND THIS DOCUMENT ARE SUBJECT TO SPECIFIC DISCLAIMERS, SET FORTH AT www.vishay.com/doc?91000

Designing With Sfernice Thin Film Fuses

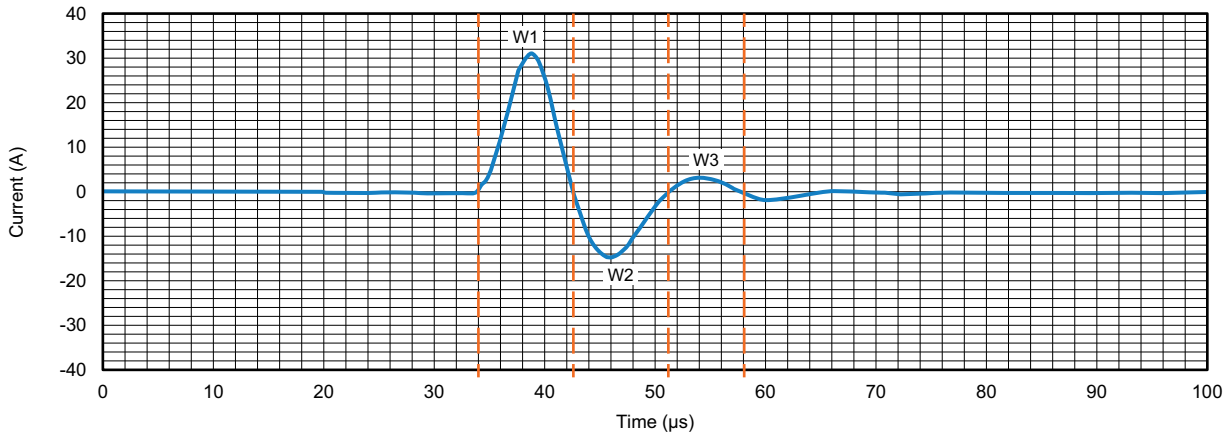

Fig. 5 - Oscilloscope Capture of Inrush Current Pulses Divided Into Three Segments (W1, W2, and W3). These Measured Waveforms are Used to Calculate the Equivalent Joule Integral ($I^2 \times t$) for evaluating fuse performance under pulse conditions

CONCLUSION

Thin film fuses continue to evolve as essential components in safeguarding compact, high performance electronics. As designs move toward higher power density, faster switching speeds, and greater functional integration, these fuses provide a precise and predictable means of protecting sensitive circuits from overload and fault conditions. A clear understanding of their thermal behavior, $I^2 \times t$ characteristics, and derating principles enables engineers to design protection schemes that are both space-efficient and reliable. Looking ahead, as electrification and miniaturization accelerate across industries – from automotive systems to connected devices – thin film fuse technology will remain a quiet but indispensable element of robust electronic design.

For technical questions, contact: sferthinfilm@vishay.com
THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE. THE PRODUCTS DESCRIBED HEREIN AND THIS DOCUMENT ARE SUBJECT TO SPECIFIC DISCLAIMERS, SET FORTH AT www.vishay.com/doc?91000

Designing With Sfernice Thin Film Fuses

FAQ

What is the Current Range?

Each family has its own current range:

- S2F series: 0.315 A to 7.0 A
- S3F series: 0.5 A to 7.0 A
- SFT series: 0.5 A to 7.0 A
- SF2T series: 0.5 A to 7.0 A

What is the Typical Lead Time for These Products?

If parts are not in stock, the lead time is 16 weeks.

What is the Standard Package?

Tape and reel: 5000 pieces for 1206 and 0603 sizes, and 10 000 pieces for the 0402 size.

What is the Shelf Life?

The shelf life is at least two years.

What is the Fuse Stability Over Time?

Example:

- S3F060332V1A50TT: I_R = 1.05 A for 1000 h
- S2F060332V5A00TT: I_R = 3.5 A for 1000 h

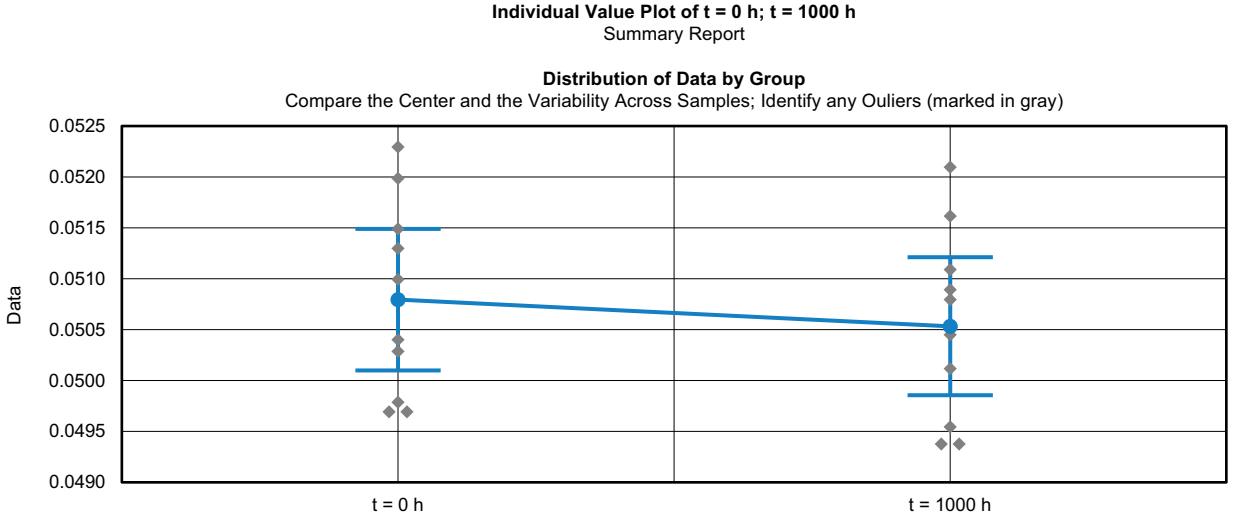

Statistics	t = 0 h	t = 1000 h
N	10	10
Mean	0.0508	0.050541
StDev	9.603E-04	9.392E-04
Minimum	0.0497	0.04938
Maximum	0.0523	0.0521

Fig. 6 - Stability Test of Fuse Performance Over 1000 h. The Individual Value Plot Compares Initial Measurements (t = 0 h) With Values After 1000 h, Showing Minimal Drift and Consistent Variability. Results Confirm Long Term Stability, With Mean Values Remaining Nearly Unchanged

For technical questions, contact: sferthinfilm@vishay.com
THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE. THE PRODUCTS DESCRIBED HEREIN AND THIS DOCUMENT ARE SUBJECT TO SPECIFIC DISCLAIMERS, SET FORTH AT www.vishay.com/doc?91000